

City of Perth




Design and Construction Note

508.02

Bus Stops and Shelters

Colonial Adshel Bus Shelter

Reviewed: 30/04/2019

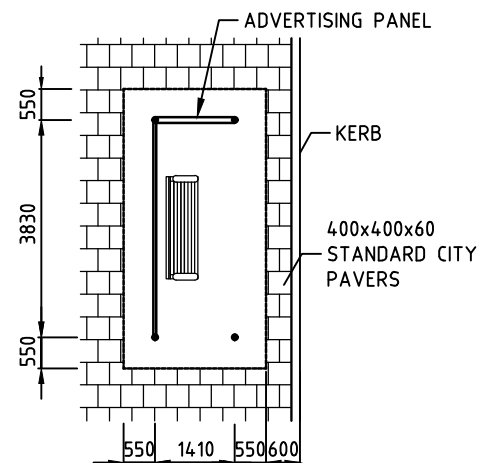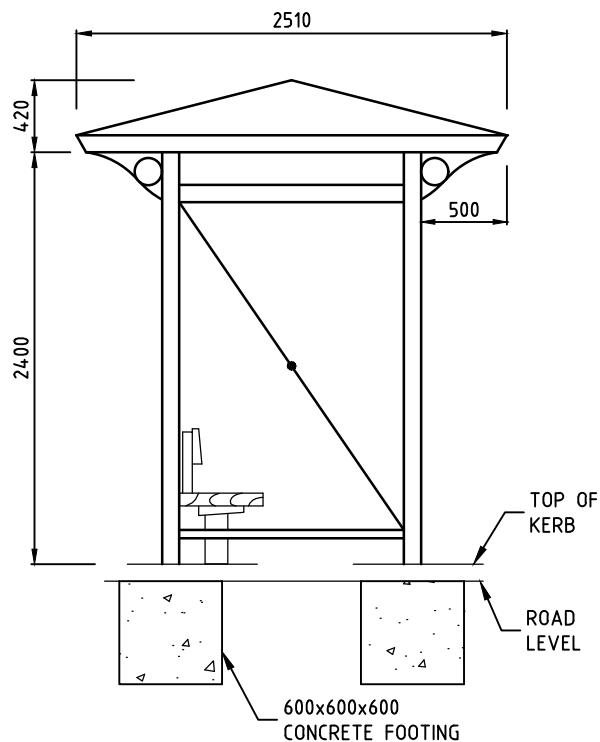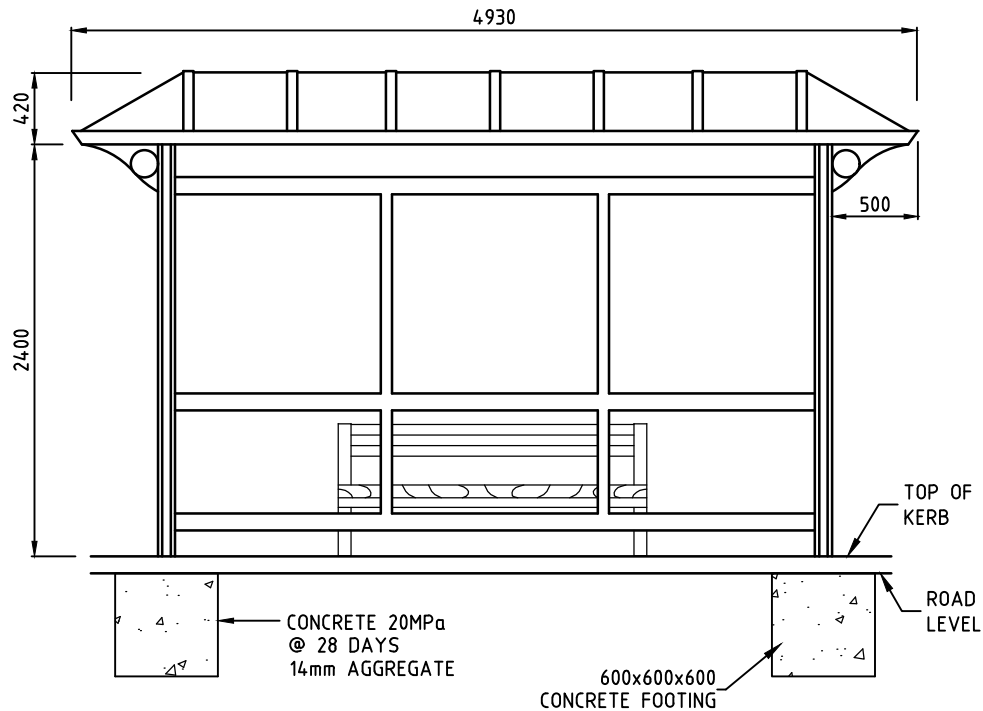

Note

Bus shelters should be located where there is a need for shelter from sun, rain and/or wind, for passengers waiting for or alighting from buses.

They should be positioned:

- * a minimum of 600mm from overhang to the road edge;
- * to avoid damage to existing services and/or tree roots;
- * to avoid affecting 'line of sight' for vehicles entering traffic from adjacent cross-overs (where applicable);

The standard City of Perth Bus Shelter is the 'Colonial' designed and supplied by: Adshel Street Furniture
ste 7, 1050 Hay Street
West Perth, WA 6005
PH: (08) 9237 4444

© Copyright of this design is the property of Adshel and shall not be reproduced in any form without prior written consent.