


Design and Construction Note 508 04

Bus Stops and Shelters

Placement and Setout of Tactiles at Bus Stops

Reviewed: 30/04/2019

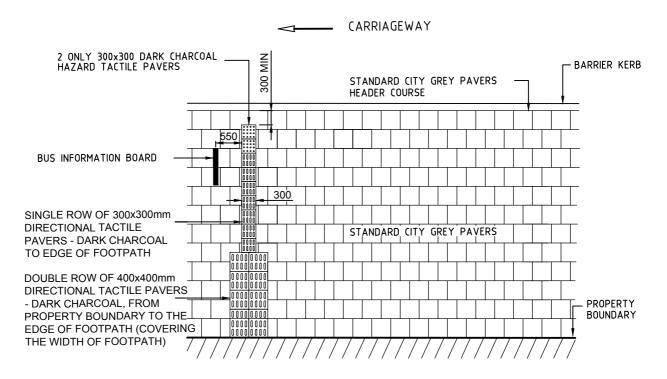

TYPICAL BUS STOP AND TACTILE PAVERS WITHOUT SHELTER

Note

- * Street furniture should be placed no closer than 1200mm from the bus information board.
- Refer to City of Perth Design and Construction Notes Book 100 drawing 101.04, for preferred kerb height detail.